


# PTU50/51/56

ultrasonic level transmitter

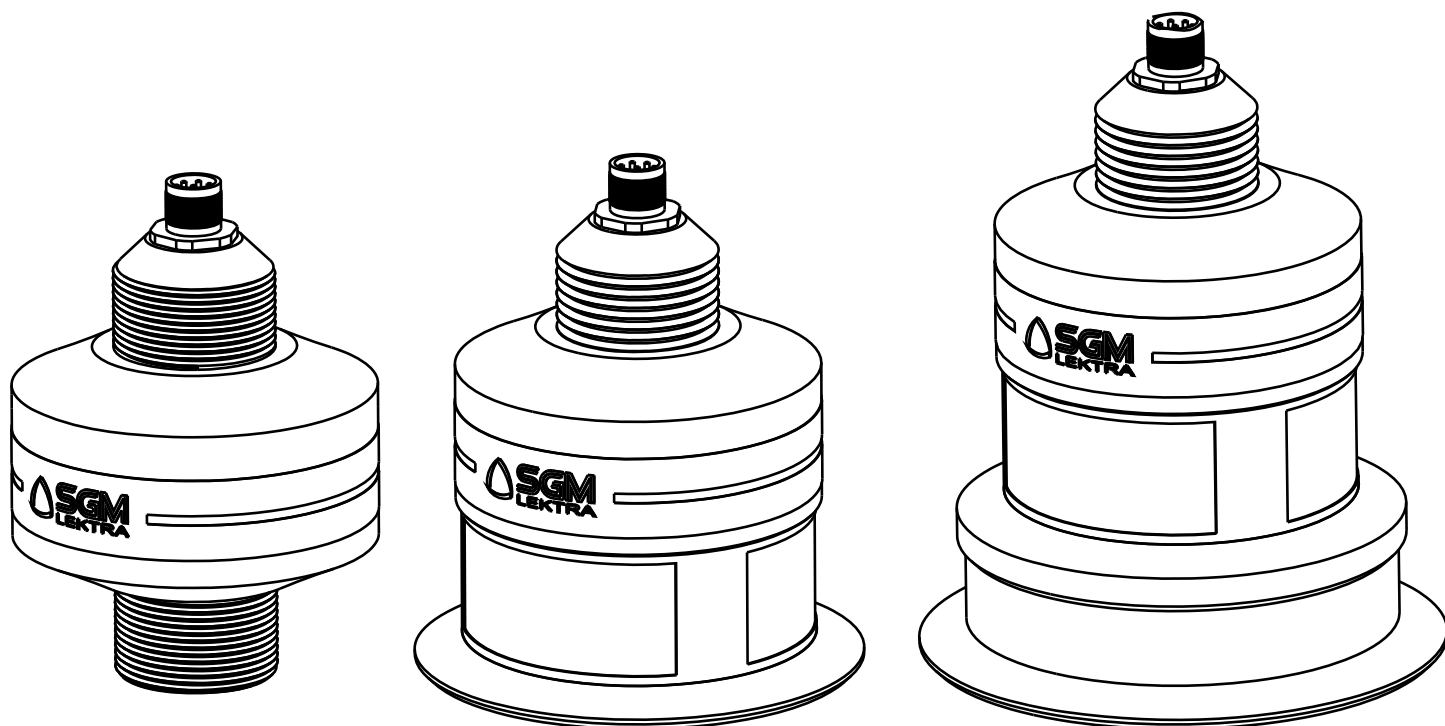

# CONTENTS

---

<b>1-WARRANTY</b>	pag. 3
<b>2-PRODUCT</b>	pag. 4
<b>3-PERFORMANCE SPECIFICATIONS</b>	pag. 5
<b>4-DIMENSIONS</b>	pag. 6
<b>5-INSTALLATION</b>	pag. 7
<b>6-ELECTRICAL CONNECTIONS</b>	pag. 11
<b>7-LOCAL OPERATOR INTERFACE (LOI)-VL601</b>	pag. 13
<b>8-QUICK SETUP</b>	pag. 14
<b>9-ADVANCED SETUP</b>	pag. 20
<b>10-FACTORY TEST AND QUALITY CERTIFICATE</b>	pag. 32

# 1-WARRANTY

---

Products supplied by SGM LEKTRA are guaranteed for a period of 12 (twelve) months from delivery date according to the conditions specified in our sale conditions document.


SGM LEKTRA can choose to repair or replace the Product.

If the Product is repaired it will maintain the original term of guarantee, whereas if the Product is replaced it will have 12 (twelve) months of guarantee.

The warranty will be null if the Client modifies, repair or uses the Products for other purposes than the normal conditions foreseen by instructions or Contract.


In no circumstances shall SGM LEKTRA be liable for direct, indirect or consequential or other loss or damage whether caused by negligence on the part of the company or its employees or otherwise howsoever arising out of defective goods

## 2-PRODUCT

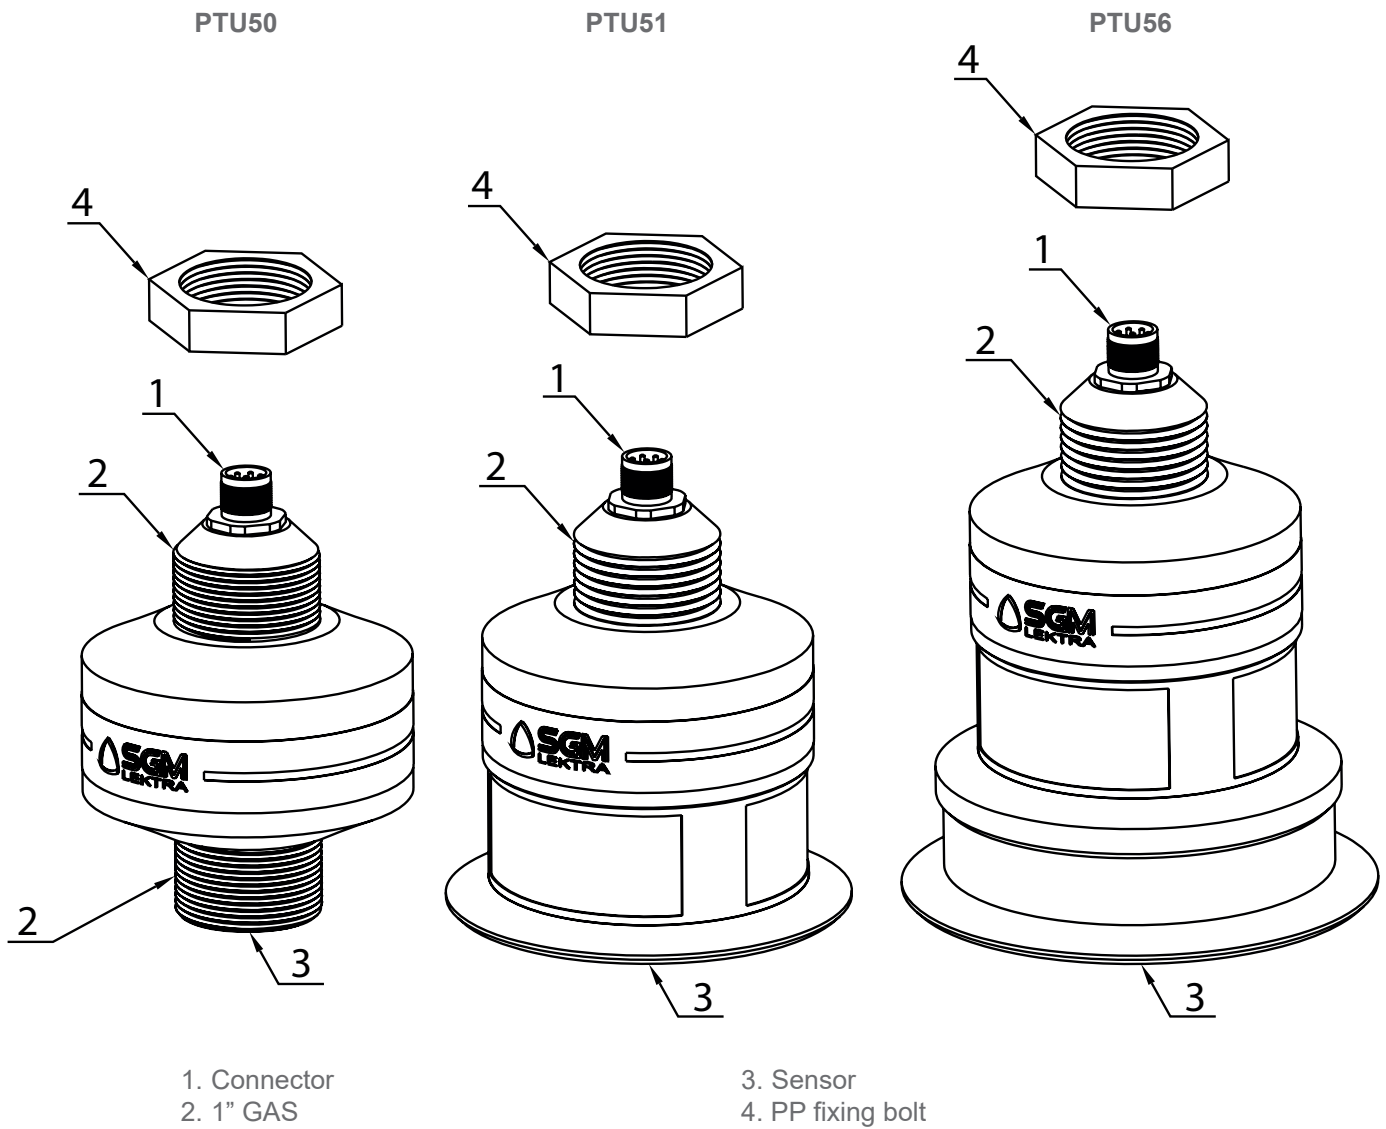

### 2.1 IDENTIFICATION

Each meter has an adhesive identification plate on which are the meter main data. The following picture describes the information and data on the identification plate.

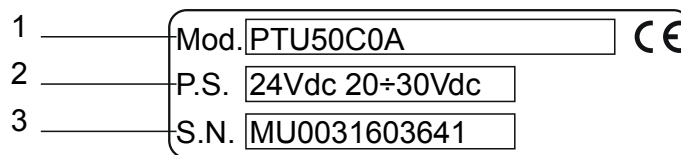

1. Product code

2. Power supply

3. Serial number

## 3-FEATURES

---

**Housing material**

Polypropylene (PP)

**Mechanical installation**

1"GAS M - PP flange DN100/125 opt.

**Protection degree**

IP68

**Electrical connection**

IP68 male connector with 5/10/15/20m linking cable

**Working temperature**

-25 ÷ +75°C

**Pressure**

From 0,5 to 1,5 bar (absolute)

**Power supply**

24Vdc

**Power consumption**

1.5W

**Analog output**

4÷20mA max 750ohm

**Digital communication**

MODBUS RTU

**Max measure range**

PTU50 0.05÷1.5m; PTU51 0.3÷6m; PTU56 0,5÷12m

In case of non perfectly reflecting surfaces, the maximum distance value will be reduced

**Temperature compensation**

digital in the working temperature

**Accuracy**

±0,2% (of the measured distance) not better than ±3mm (PTU50 ±1mm)

**Resolution**

1mm

**Calibration**

VLW601 prog. module with 4 buttons or by MODBUS RTU

**Warm-up**

30 minutes typical

**LCD Display**

matrix LCDdisplay on VLW601 module (opt.)

# 4-DIMENSIONS



## 4.1 MECHANICAL DIMENSIONS

The PTU50, PTU51 and PTU56 transmitter have the 1" GAS M threaded, equipped with 1" PP fixing bolt.

Also available with:

PTU50-51 - DN100 PN6 UNI 1092-1/PP flange (optional accessory)



PTU56 - DN125 PN6 UNI 1092-1/PP flange (optional accessory)

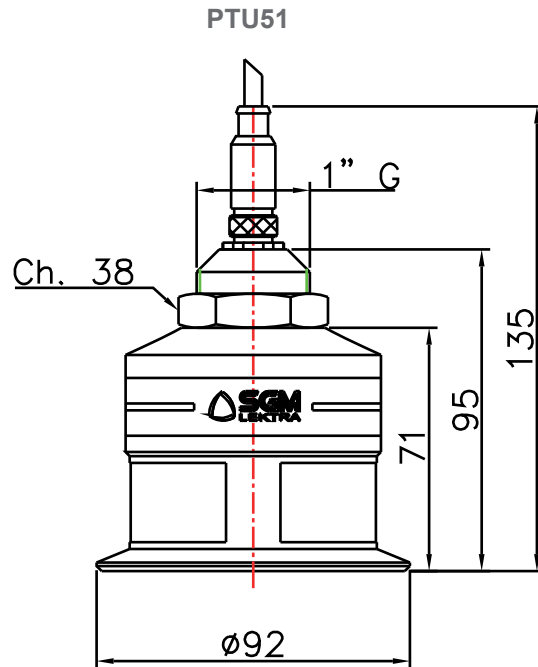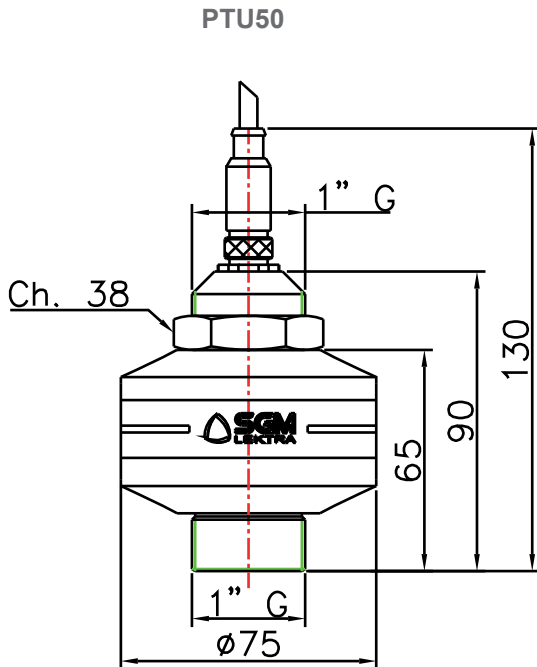

Flange DN100/125 PN6  
UNI 1092-1/PP  
(optional accessories)

D: DN100 ø210; DN125 ø240

K: DN100 ø170; DN125 ø200

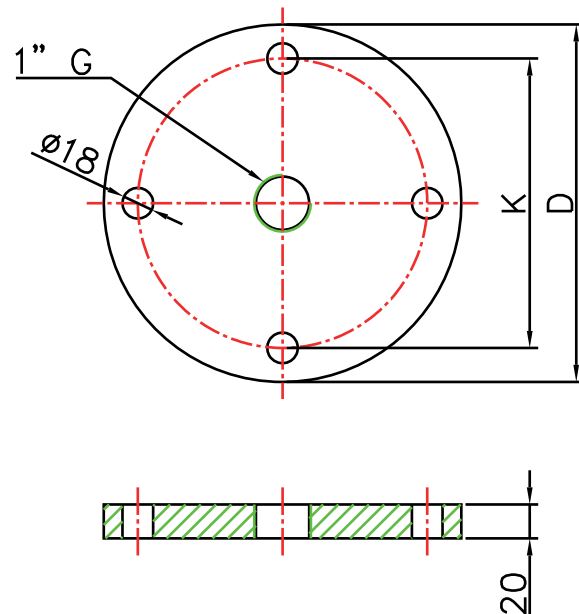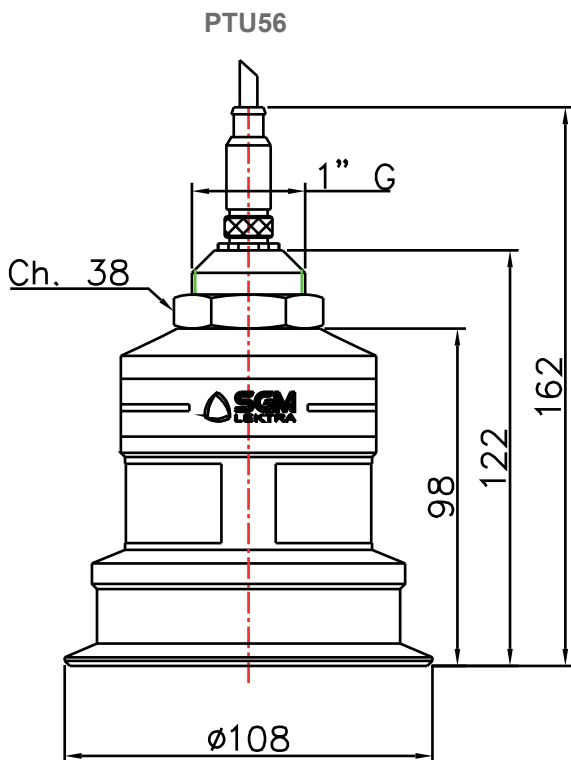


## 5-INSTALLATION

### 5.1 MOUNTING PRECAUTIONS

#### 5.1.1 Mounting position


- With cambered roof, Do not install the sensor in the tank center (b). Leave a 300mm (d) minimum distance between the sensor and the tank smooth wall.
- Use a protective cover to protect the sensor from weather and direct sunlight (c).
- Do not install the sensor near the load zone (a).
- Make sure that in the sensor emission beam (lobe "α") there are no obstacles (f,s) that can be intercepted as level.
- Make sure that there is not foam presence on the product surface to be measured.

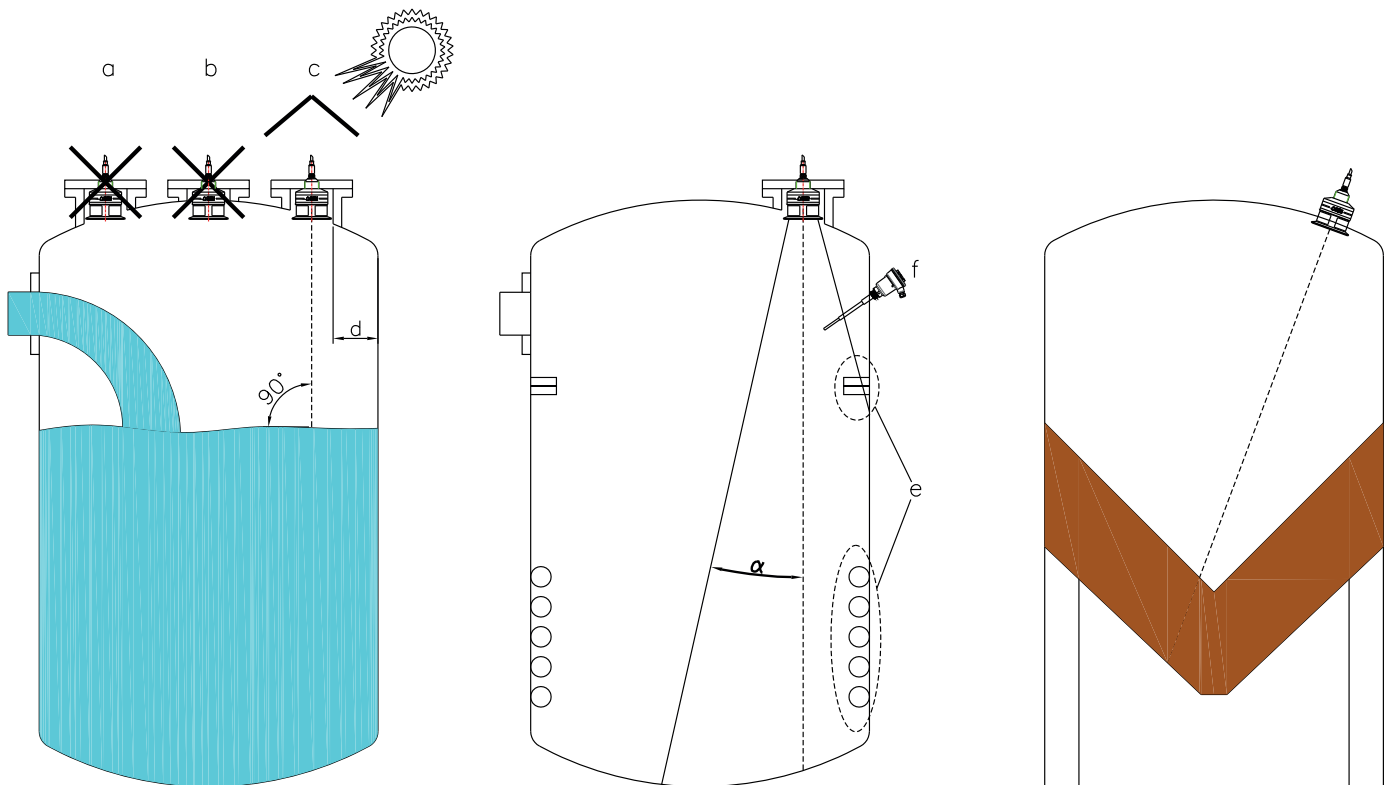

	Lobo "α"
PTU50 1,5mt	5°
PTU51 6mt	5°
PTU56 12mt	5°


#### 5.1.2 Blind distance

During installation is important to remember that in the sensor vicinity there is a blind zone (or BLIND DISTANCE) of 0.05m (for 1.5m max PTU50 range), 0.3m (for 6m max PTU51 range) or 0.5m (for 12m max PTU56 range) where the sensor can not measure.

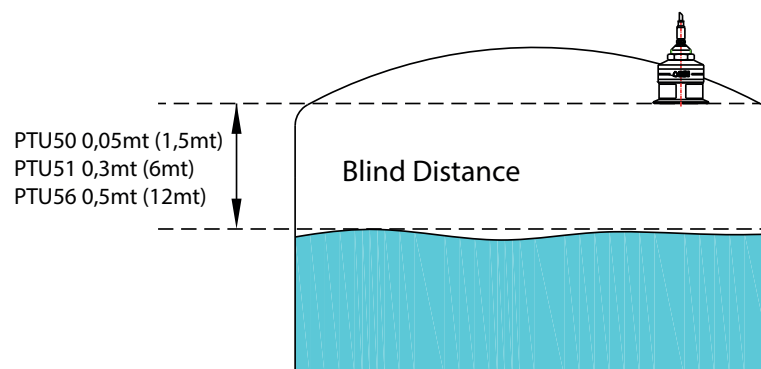


### 5.1.3 Installation in nozzle

Installing the PTU50-51-56 sensor in a nozzle, make sure the sensor bottom protrudes at least 10 mm from the bottom nozzle.

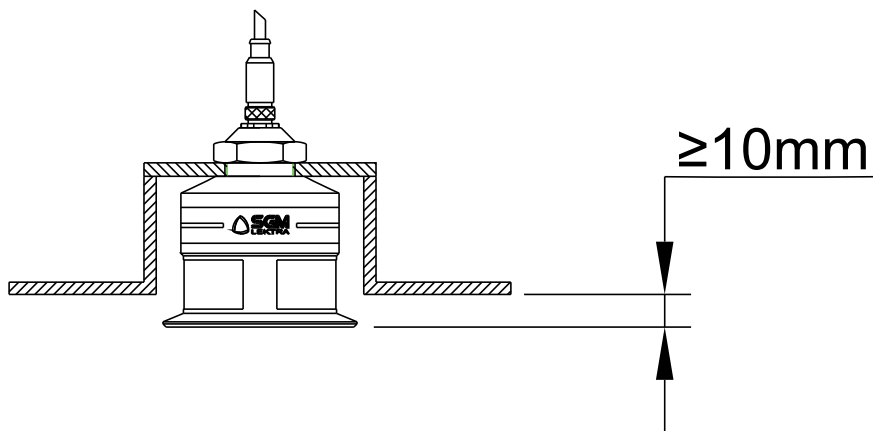

PTU50-51-56 can be installed in an extension pipe to turn away the sensor from the maximum level point. The extension pipe must be flat and without joints (welds, etc.), also, the pipe terminal part must be cut at 45° and with the borders without burr.

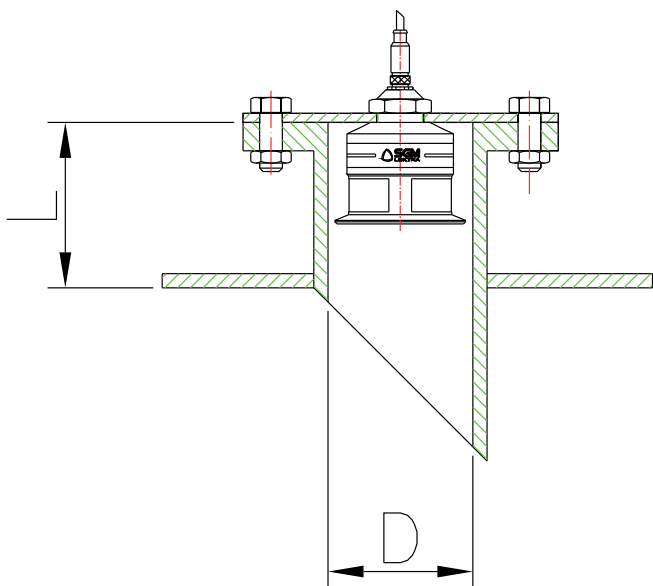

PTU50 1,5mt - PTU51 6mt		PTU56 12mt	
D (mm)	L max (mm)	D (mm)	L max (mm)
100	80	125	240
125	240	125	300
150	300		





### 5.1.4 Reference pipe installation

Disturbing factors that may influence the level measurement in liquids, as for example:

- foam presence on the product surface
  - internal structures presence in the tank
  - presence on the liquid surface of floating bodies can be avoided with the use of level measurement inside of pipes (by-pass pipe or calm pipe with 100mm min. diameter for PTU50-51, or 125mm min. diameter for PTU56)
- The pipe must have a length greater or equal than the empty distance, also, must have some of vent holes to allow the pipe regular filling and emptying.

In the programming menu, to the "PRODUCT" parameter, must select the "LIQUID PIPE" option

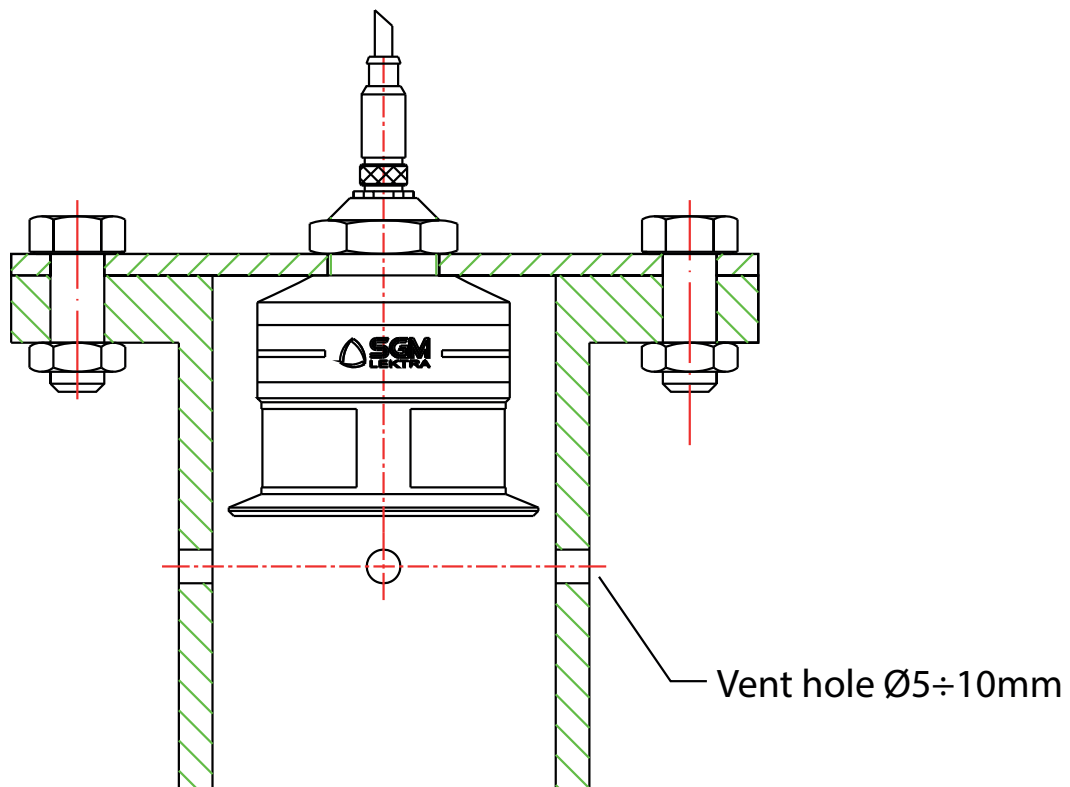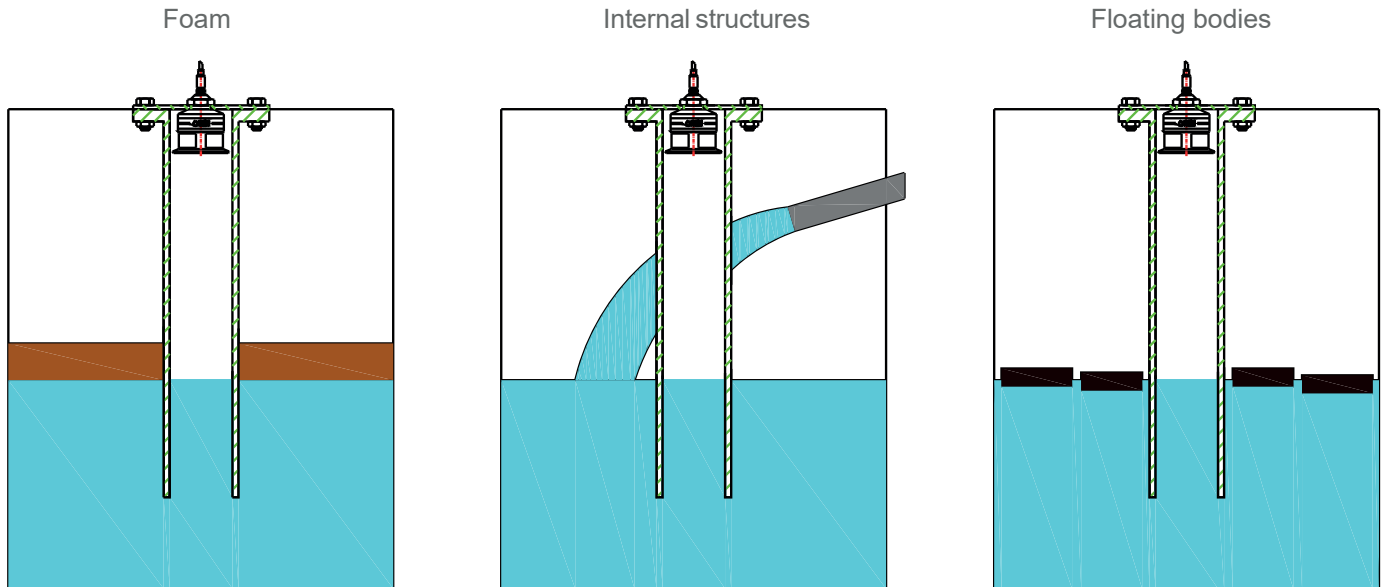


### 5.1.5 Agitators presence

The level measurement is possible thanks to the Auto-Tuned statistical filter.

Should rarely need to adjust the filter setting by editing 2 PTU50-51-56 sensor programming parameters:


- FILTER; this parameter is present in the Quick Setup menu and in the Advanced Configuration "SETUP" menu; increasing the parameter value, decreases the sensor sensitivity to the level measurement sudden variations.
- F-WINDOW; this parameter is present in the Advanced Configuration "SERVICE" menu; decreasing the parameter programmed value, increases the sensor immunity to false echoes.

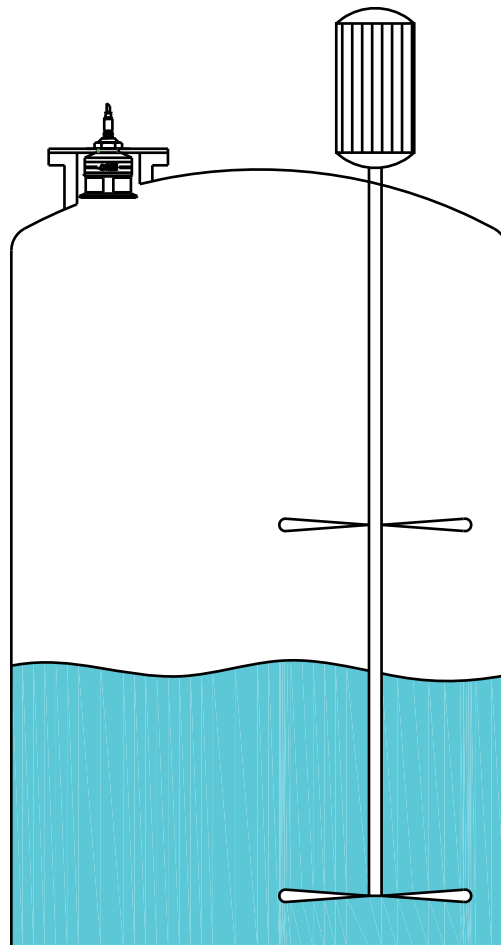

## 6-ELECTRICAL CONNECTIONS


### 6.1 WIRING

- 1) Separate the engine control cables or power cables from the PTU5x connection cables
- 2) Isolate unused wires of the cable.
- 3) Fully tighten the connector ring nut.

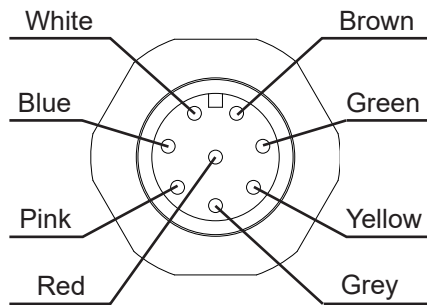

Brown	GND (0V)
Red	+24 Vdc
White	SDA Display
Yellow	+4+20mA


Green	A (RS485)
Blue	B (RS485)
Pink	+3.3V Display
Grey	SCL Display

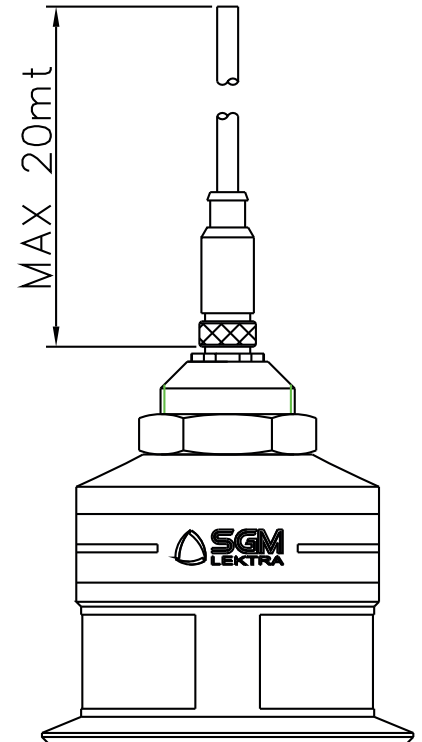

### 6.2 MOISTURE INFILTRATION

To avoid moisture infiltration inside the connector it is recommended to:

- Screw the connector nut ring tightly by hand.
- position the cable so that it forms a downward curve; in this way the condensation and/or rain water will tend to drip from the curve bottom

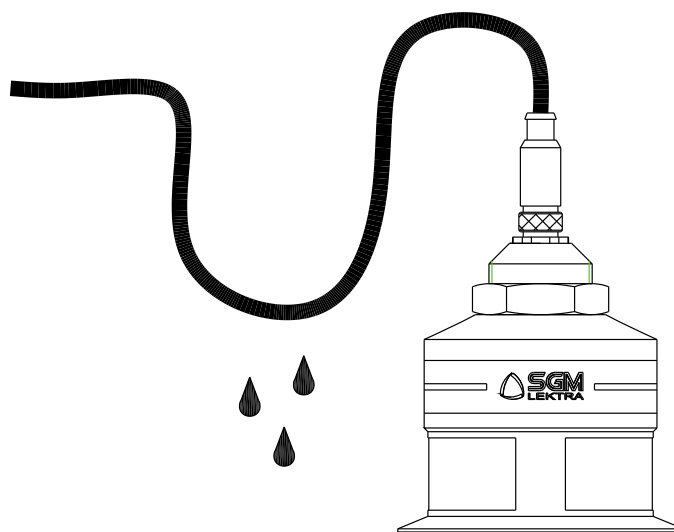


## 6.3 DIGITAL COMMUNICATIONS CONNECTION

### 6.3.1 Via MODBUS RTU

- 1) PTU50, PTU51 o PTU56 with MODBUS RTU communication protocol
- 2) USB/RS485 interface module, cod.694A004A
- 3) MODBUS RTU communication S/W, cod.010F105A

With this software is possible:

- connect, by selecting the UID address, the PTU50, PTU51 or PTU56 transmitters in MODBUS RTU network
- read on your PC monitor all measures in reading and operation data
- programming all configuration parameters
- storing on files, data logger function; measures in reading and operating states

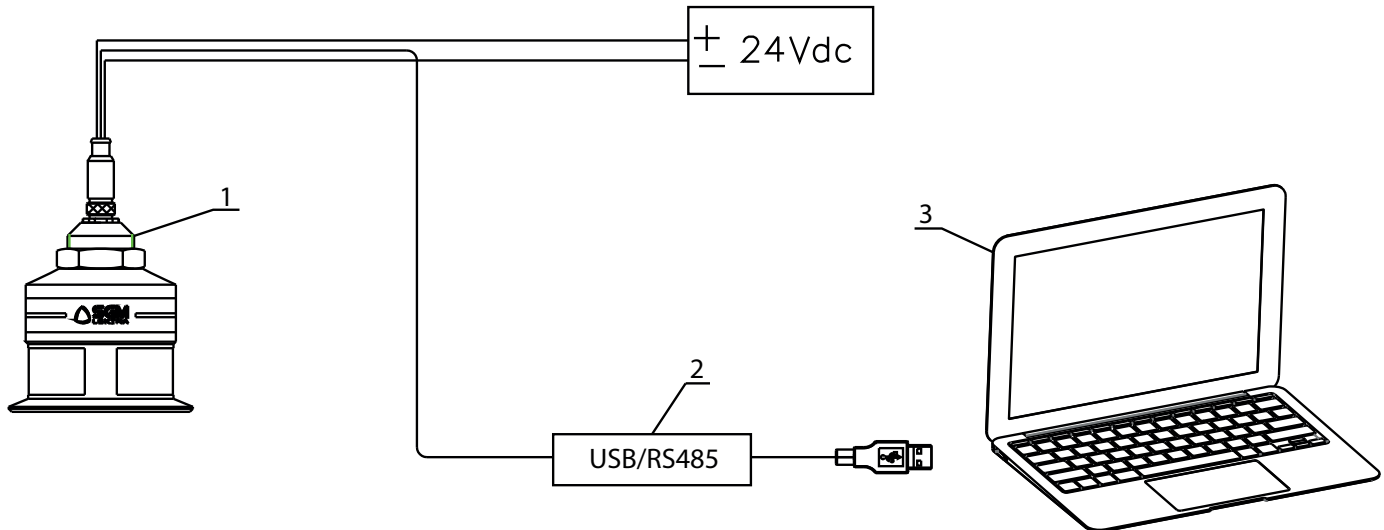










## 7-LOCAL OPERATOR INTERFACE (LOI) - VL601


LOI is an operator communications center for the METER. Through the LOI, the operator can access any transmitter function for changing configuration parameter settings or other functions.

### 7.1 VLW601 FEATURES

The VLW601 program module has 4 buttons which allow to perform all operational, control and programming instrument functions.

In the configuration menus, is possible:

1. Submenus and parameters access; press  to select and press  to access.
2. Parameter options choice: Press  to select the option and press  to store the option.  
Press  to exit without storing.
3. Configure the parameter values; in some parameters the configuration is done by setting a value (eg., in the SET DISTANCE 4mA parameter is possible to change the the corresponding distance value, in mm):  
press  to select the digit to be modified (the digit is highlighted in inverse ), press  to change the high lighted digits number, press  to save the set value and exit automatically.  
Press  to exit without storing.

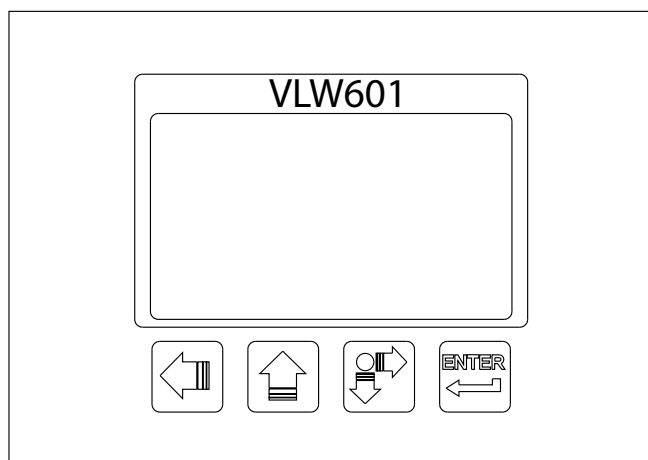

#### LEFT ARROW button:

- Exit configuration
- Back to previous menu
- Echo map (from RUN mode)



#### UP ARROW button:

- Parameter values modification
- Parameter scroll




#### SCROLL button:

- Cursor movement (to the right)
- Parameter scroll



#### ENTER button:

- Configuration access
- Options confirmation
- Parameters values confirmation



Displayed at the bottom indicates the correct echo signal reception




Displayed at the top alerts that there is a generic error; press SCROLL to show the message that indicates the present error type.

- The METER returns automatically to RUN mode.

# 8-QUICK SETUP

## 8.1 - Quick Setup menu structure

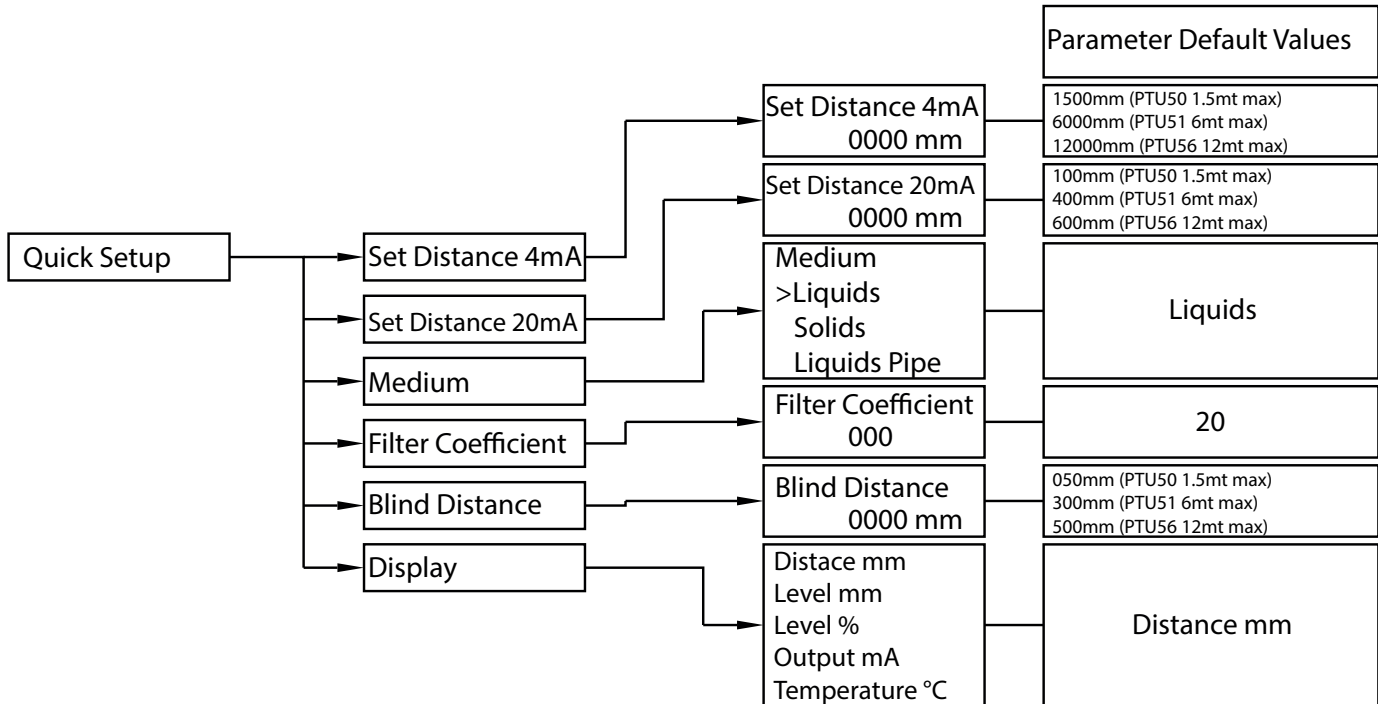

## 8.2 - QUICK SETUP MODE

From "RUN" mode press ENTER to access the Quick Setup menu.

4321<sup>D</sup> mm

Select the parameters by moving the cursor with SCROLL, and confirm with ENTER; press LEFT ARROW to exit.

```

▶ DISTANCE 4mA
  DISTANCE 20mA
  MEDIUM
  FILTER COEFFICIENT
  BLIND DISTANCE
  DISPLAY
    
```

### 8.2.1 SET DISTANCE 4mA

Press ENTER to display the distance value associated with 4mA output.

Use SCROLL and UP ARROW to modify that value; in the example the 4mA distance is 3500mm.  
Press ENTER to confirm.

▶ DISTANCE 4mA  
DISTANCE 20mA  
MEDIUM  
FILTER COEFFICIENT  
BLIND DISTANCE  
DISPLAY

SET DISTANCE 4mA  
**3500 mm**


### 8.2.2 SET DISTANCE 20mA

Press ENTER to display the distance value associated with 20mA output.

Use SCROLL and UP ARROW to modify that value; in the example the 20mA distance is 500mm.  
Press ENTER to confirm..

DISTANCE 4mA  
▶ DISTANCE 20mA  
MEDIUM  
FILTER COEFFICIENT  
BLIND DISTANCE  
DISPLAY

SET DISTANCE 20mA  
**0500 mm**

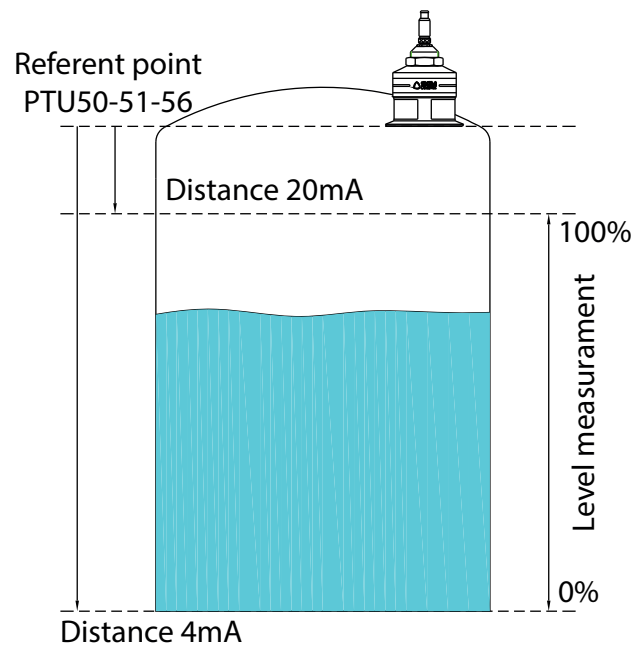

### 8.2.3 MEDIUM


Press ENTER to display the previous setting

Press SCROLL to select the medium type.  
Press ENTER to confirm.


DISTANCE 4mA  
DISTANCE 20mA  
▶ MEDIUM  
FILTER COEFFICIENT  
BLIND DISTANCE  
DISPLAY

▶ LIQUIDS  
SOLIDS  
LIQUIDS PIPE


LIQUIDS

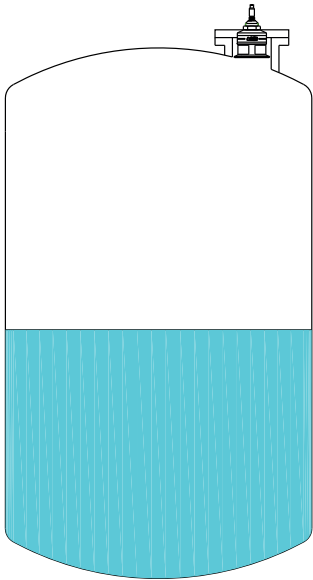

SOLIDS

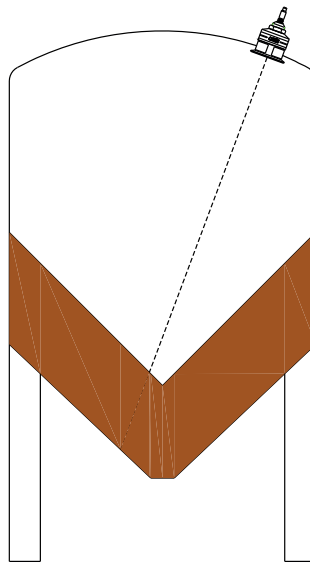

LIQUIDS PIPE

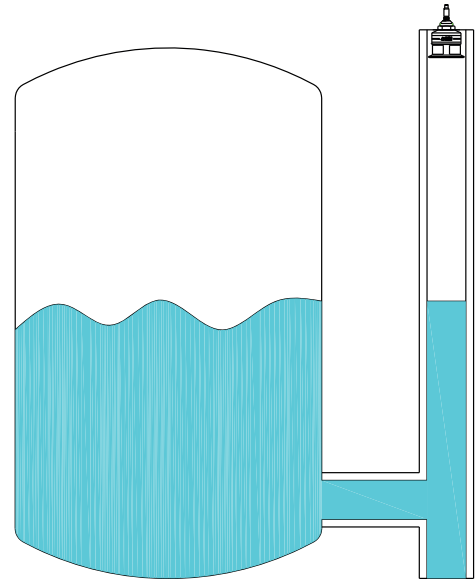



## 8.2.4 FILTER COEFFICIENT

Press ENTER.

Use SCROLL and UP ARROW to modify the value. Input a value from 1 to 99.

1 maximum speed, 99 maximum slowness.

The function is deactivated with 0 (immediate response).


Press ENTER to confirm

DISTANCE 4mA  
DISTANCE 20mA  
MEDIUM  
▶ FILTER COEFFICIENT  
BLIND DISTANCE  
DISPLAY


FILTER COEFFICIENT

20


Fast resp. 5÷10

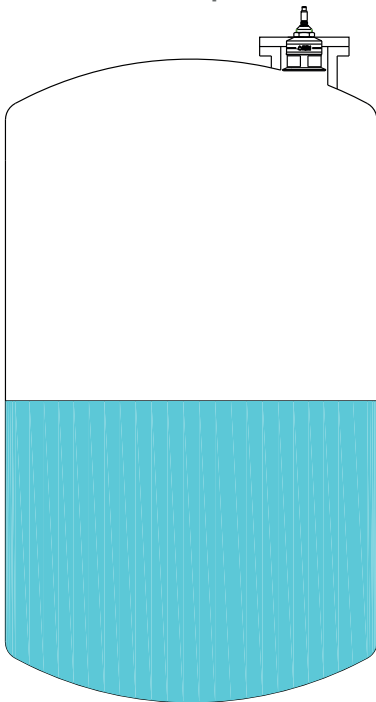

Normal resp. 20

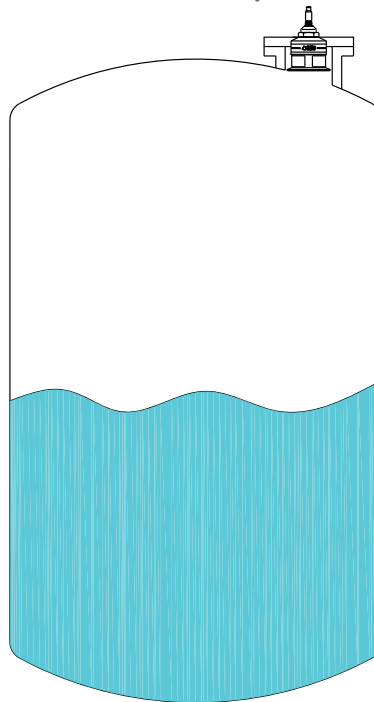

Slow resp. 40÷100

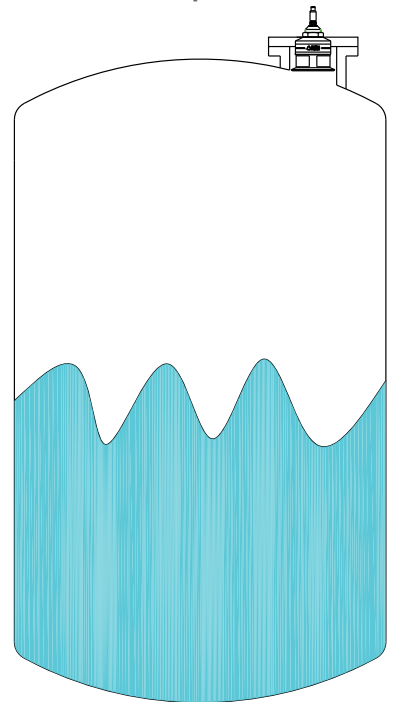


### 8.2.5 BLIND DISTANCE

Press ENTER. The BLIND ZONE is used to avoid undesired measures near to the transmitter.

Use SCROLL and UP ARROW to modify the value. Press ENTER to confirm. The minimum value is 50mm (PTU50), or 300mm (PTU51) or 500mm (PTU56).

DISTANCE 4mA  
 DISTANCE 20mA  
 MEDIUM  
 FILTER COEFFICIENT  
 ► BLIND DISTANCE  
 DISPLAY

BLIND DISTANCE  
  
**0250 mm**

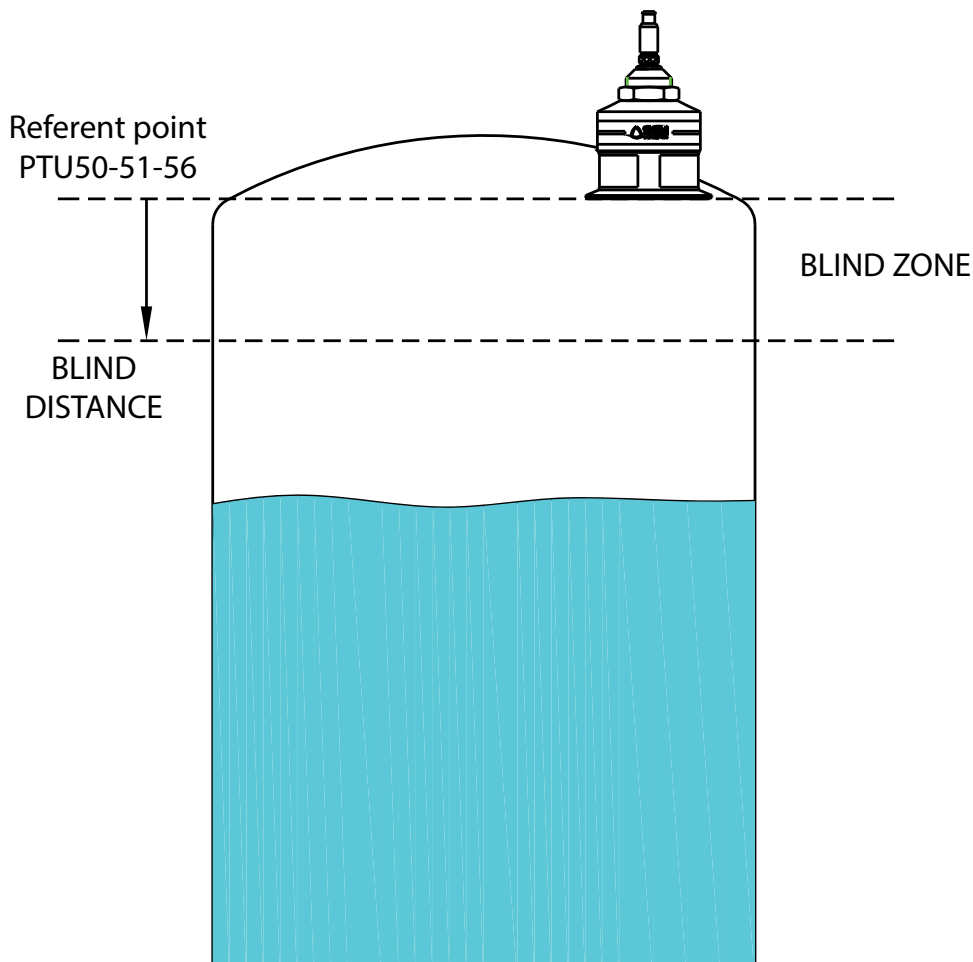

### 8.2.6 DISPLAY

Press ENTER to access the settings change.

With the SCROLL button is possible to select the data to display Press ENTER to confirm.

DISTANCE 4mA  
 DISTANCE 20mA  
 MEDIUM  
 FILTER COEFFICIENT  
 BLIND DISTANCE  
 ► DISPLAY


► DISTANCE mm  
 LEVEL mm  
 LEVEL %  
 OUTPUT mA  
 TEMPERATURE °C

### 8.3 - ECHO MAP

Pressing LEFT ARROW, from RUN mode, to access directly to the echoes digital map display, which are in PTU50-51-56 receiving.


This function is useful for:

- properly orient the transducer pointing.
- verify the echoes in acquisition correctness.
- identify any false echo signals that may cause measurement errors.

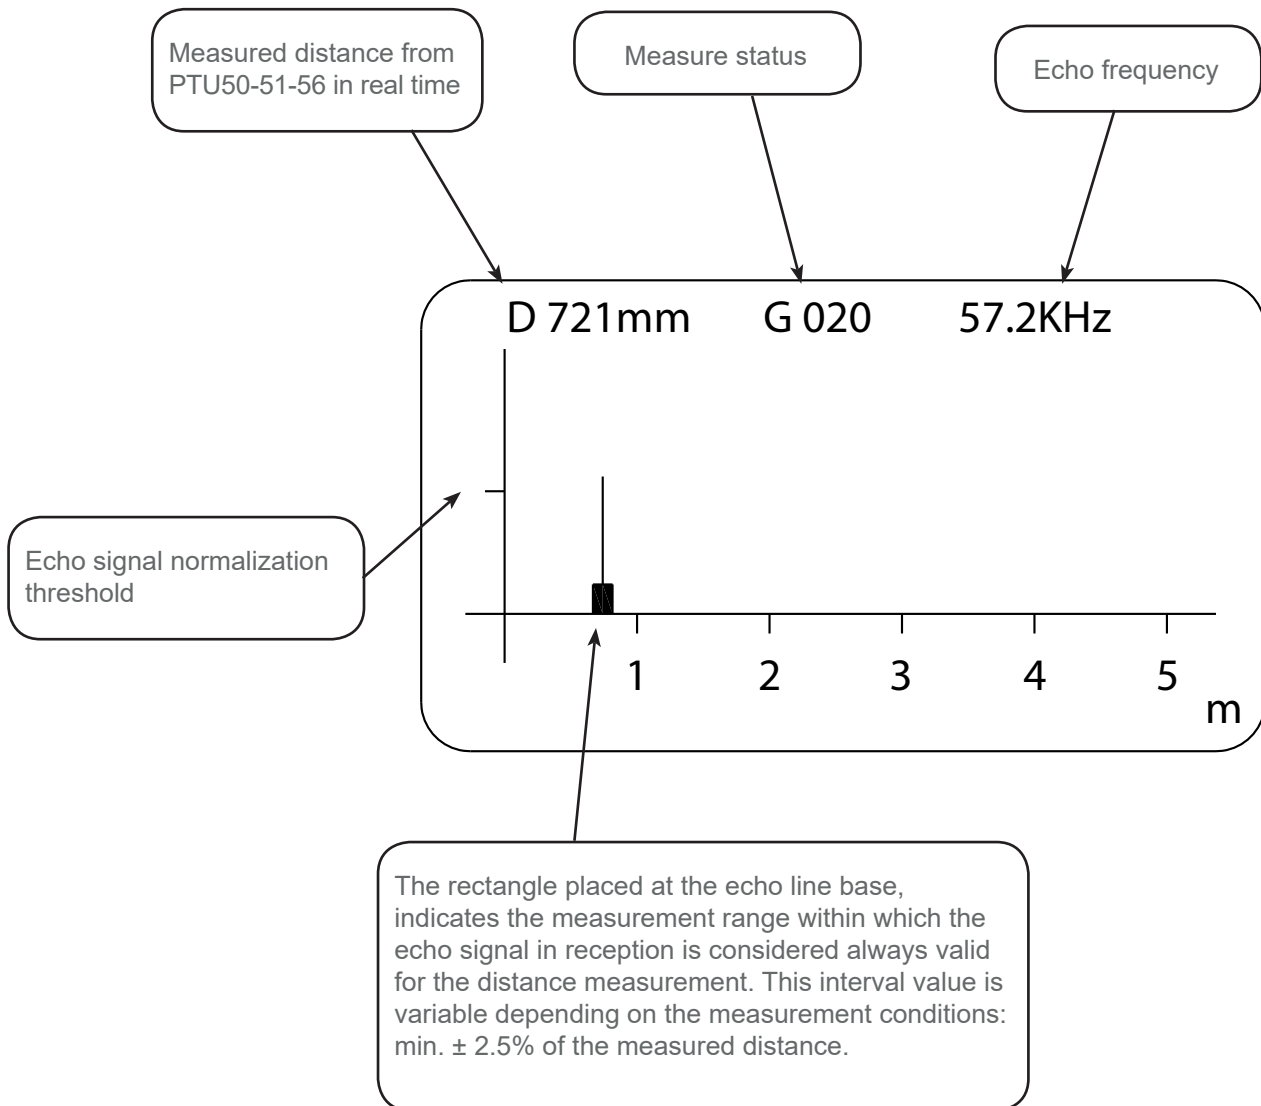

# 9-ADVANCED CONFIGURATION

## 9.1 - "SETUP" MENU

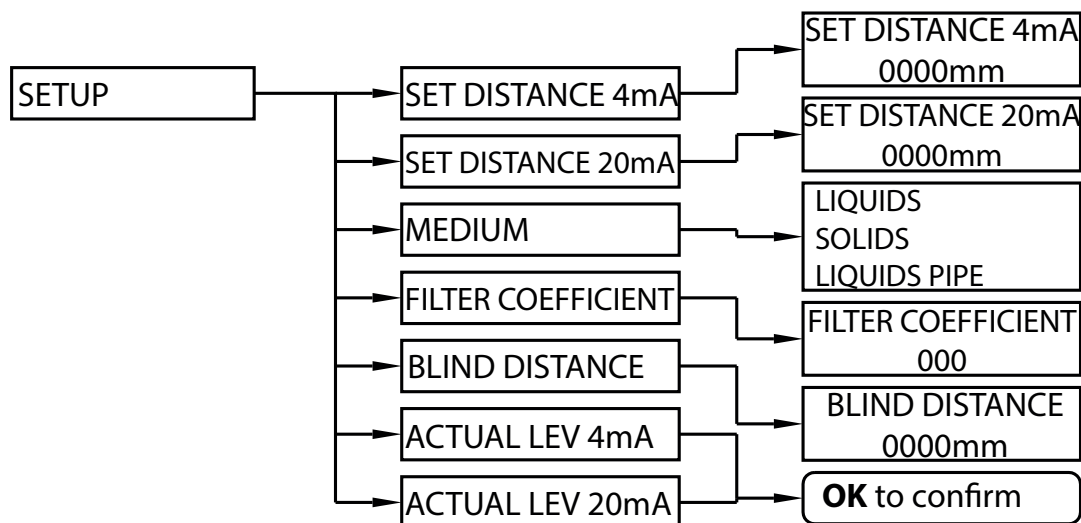

## 9.2 - SETUP

From "RUN" mode, holding down UP ARROW, press ENTER to the advanced configuration mode access.

Press SCROLL to select the menu and press ENTER to access.  
Press LEFT ARROW to exit.

DISTANCE <b>3321 mm</b> LEVEL <b>1679 mm</b>
► SETUP DISPLAY DIAGNOSTIC SERVICE INFO
► SET DISTANCE 4mA SET DISTANCE 20mA MEDIUM FILTER COEFFICIENT BLIND DISTANCE ACTUAL LEV 4mA ACTUAL LEV 20mA

**9.2.1 - SET DISTANCE 4mA**

Position the cursor on DISTANCE 4mA, press ENTER to access.

Use UP ARROW and SCROLL to modify the value.  
Press ENTER to confirm.  
LEFT ARROW to exit without changes

Default value: 1500mm (PTU50 range 1,5mt), 6000mm (PTU51 range 6mt.)  
or 12000mm (PTU56 range 12mt)

► SET DISTANCE 4mA  
SET DISTANCE 20mA  
MEDIUM  
FILTER COEFFICIENT  
BLIND DISTANCE  
ACTUAL LEV 4mA  
ACTUAL LEV 20mA

SET DISTANCE 4mA

**5000 mm**

**9.2.2 - SET DISTANCE 20mA**

Position the cursor on DISTANCE 20mA, press ENTER to access.

Use UP ARROW and SCROLL to modify the value.  
Press ENTER to confirm.  
LEFT ARROW to exit without changes

Default value: 100mm (PTU50 range 1,5mt), 400mm (PTU51 range 6mt.)  
or 600mm (PTU56 range 12mt)

SET DISTANCE 4mA  
► SET DISTANCE 20mA  
MEDIUM  
FILTER COEFFICIENT  
BLIND DISTANCE  
ACTUAL LEV 4mA  
ACTUAL LEV 20mA

SET DISTANCE 20mA

**0300 mm**

**9.2.3 - MEDIUM**

Position the cursor on MEDIUM, press ENTER to access.

3 configurations are possible:  
LIQUIDS - liquids measurement  
SOLIDS - granular solids measurement  
LIQUIDS PIPE - liquids measurement in pipe reference  
Press SCROLL to select the product type.  
Press ENTER to confirm.  
LEFT ARROW to exit without changes

Default value: LIQUIDS

SET DISTANCE 4mA  
SET DISTANCE 20mA  
► MEDIUM  
FILTER COEFFICIENT  
BLIND DISTANCE  
ACTUAL LEV 4mA  
ACTUAL LEV 20mA

► LIQUIDS

SOLIDS

LIQUIDS PIPE

**9.2.4 - FILTER COEFFICIENT**

Position the cursor on FILTER COEFFICIENT, press ENTER to access.

Enter a value from 1 to 99: 1 maximum speed, 99 maximum slowness.  
The function is deactivated with 0 (immediate response)  
Use UP ARROW and SCROLL to modify the value.  
Press ENTER to confirm.  
LEFT ARROW to exit without changes

Default value: 10

SET DISTANCE 4mA  
SET DISTANCE 20mA  
MEDIUM  
► FILTER COEFFICIENT  
BLIND DISTANCE  
ACTUAL LEV 4mA  
ACTUAL LEV 20mA

FILTER COEFFICIENT

**20**

**9.2.5 - BLIND DISTANCE**

Position the cursor on DISTANCE 4mA, press ENTER to access.  
 Represent the "BLIND ZONE"

Input the desired value in order to avoid measures near the surface of the sensor (if necessary).

The minimum value is 250mm (6m vers.) or 400mm (10m vers.)

Use UP ARROW and SCROLL to modify the value.

Press ENTER to confirm.

LEFT ARROW to exit without changes

Default values: 50mm (PTU50), 300mm (PTU51) or 500mm (PTU56)

```

SET DISTANCE 4mA
SET DISTANCE 20mA
MEDIUM
FILTER COEFFICIENT
▶ BLIND DISTANCE
ACTUAL LEV 4mA
ACTUAL LEV 20mA
    
```

```

BLIND DISTANCE

0600 mm
    
```

**9.2.6 - ACTUAL LEV. 4mA**

Position the cursor on ACTUAL LEV. 4mA, press ENTER to access.

Self distance learning function that is associated with the 4mA (lower value). Make sure that the level corresponds to 0%, ENTER to associate the actual measure with 4mA output value;

OK TO CONFIRM .

LEFT ARROW to exit without changes.

```

SET DISTANCE 4mA
SET DISTANCE 20mA
MEDIUM
FILTER COEFFICIENT
BLIND DISTANCE
▶ ACTUAL LEV 4mA
ACTUAL LEV 20mA
    
```

**9.2.7 - ACTUAL LEV. 20mA**

Position the cursor on ACTUAL LEV. 20mA, press ENTER to access.

Self distance learning function that is associated with the 20mA (upper value). Make sure that the level corresponds to 100%, ENTER to associate the actual measure with 20mA output value;


OK TO CONFIRM .

LEFT ARROW to exit without changes.

```


SET DISTANCE 4mA
SET DISTANCE 20mA
MEDIUM
FILTER COEFFICIENT
BLIND DISTANCE
ACTUAL LEV 4mA
▶ ACTUAL LEV 20mA
    
```

### 9.3 “DISPLAY” menu

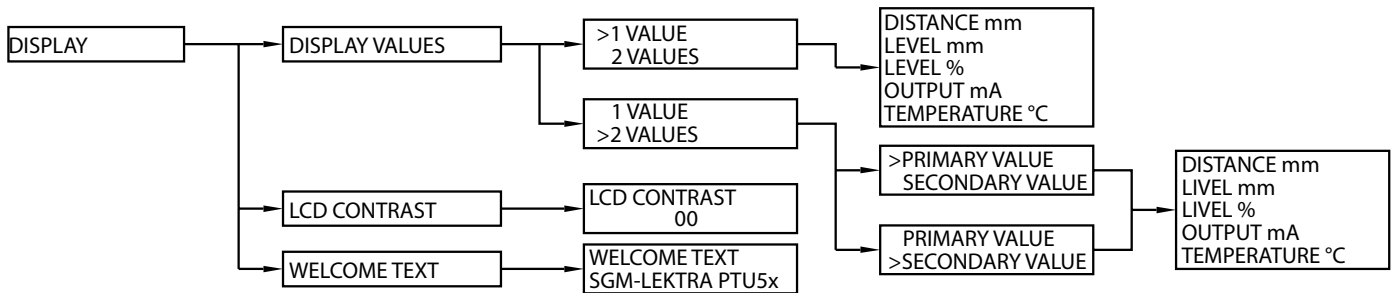


### 9.4 - DISPLAY

From “RUN” mode, holding down UP ARROW, press ENTER to access  
Position the cursor on DISPLAY and press ENTER

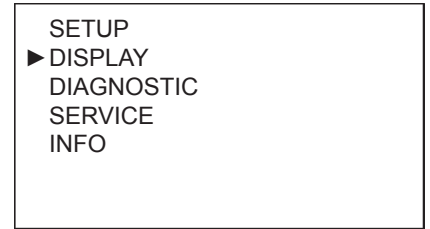


Select the parameters by moving the cursor with SCROLL and confirm with ENTER

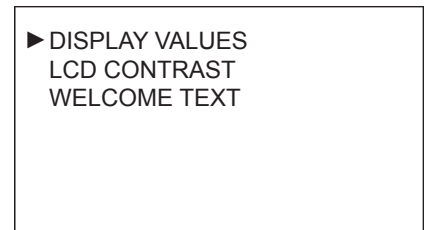

#### 9.4.1 - DISPLAY VALUES


Position the cursor on DISPLAY VALUES, press ENTER to access.

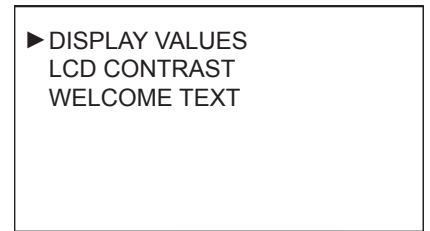

It's possible to select if one value with big digits or two values are shown on the display in “RUN” mode.


Select the parameters by moving the cursor with SCROLL and confirm with ENTER.

LEFT ARROW to exit without changes

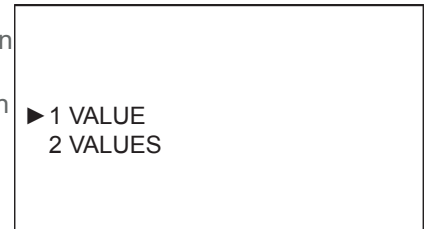

##### 9.4.1.1 - 1 VALUE


Position the cursor on 1 VALUE, press ENTER to access.

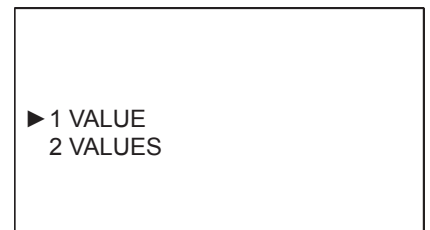

Only one value is displayed; it's possible to choose from 5 parameters. With the SCROLL button you can select data to display.

Press ENTER to confirm.

LEFT ARROW to exit without changes

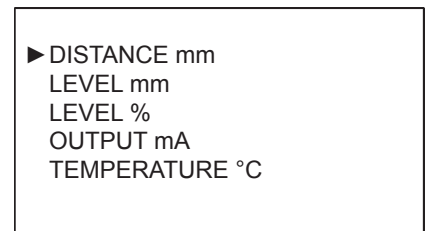

**9.4.1.2 - 2 VALUE**

Position the cursor on 2 VALUE, press ENTER to access.

```

1 VALUE
▶ 2 VALUES

```

Two values are displayed; it's possible to choose which one is the primary and which is the secondary, each with a choice of 5 parameters. With the SCROLL button you can select data to display. Press ENTER to confirm. LEFT ARROW to exit without changes

```

▶ PRIMARY VALUE
  SECONDARY VALUE

```

```

▶ DISTANCE mm
  LEVEL mm
  LEVEL %
  OUTPUT mA
  TEMPERATURE °C

```

```

  PRIMARY VALUE
▶ SECONDARY VALUE

```

```

  DISTANCE mm
▶ LEVEL mm
  LEVEL %
  OUTPUT mA
  TEMPERATURE °C

```



### 9.4.2 - LCD CONTRAST

Position the cursor on LCD CONTRAST, press ENTER to access.

it's possible to adjust the contrast of LCD, simply increasing or decreasing the value of a parameter from 0 to 63.

Use UP ARROW and SCROLL to modify the value.

Press ENTER to confirm.

LEFT ARROW to exit without changes

Default value: 32

### 9.4.4 - WELCOME TEXT

Position the cursor on WELCOME TEXT, press ENTER to access.

It's possible to edit or delete the message that is displayed by the METER during the ignition phase.

Use UP ARROW (up scroll) and SCROLL (down scroll) to change the digit; ENTER to move the digit to the right. To confirm press ENTER repeatedly until leave the parameter.

LEFT ARROW to exit without changes

Default value: SGM-LEKTRA PTU50-51-56

```

DISPLAY VALUES
▶ LCD CONTRAST
WELCOME TEXT

```

```

LCD CONTRAST

32

```

```

DISPLAY VALUES
LCD CONTRAST
▶ WELCOME TEXT

```


```

WELCOME TEXT

SGM-LEKTRA
PTU5x

```

### 9.5 “DIAGNOSTIC” menu

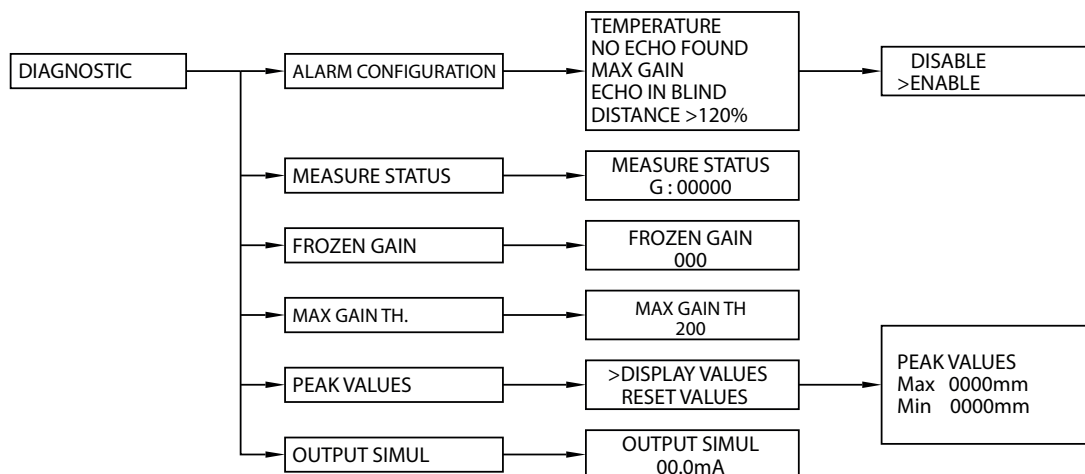

### 9.6 - DIAGNOSTIC

From “RUN” mode, holding down UP ARROW, press ENTER to access  
Position the cursor on DIAGNOSTIC and press ENTER

```

SETUP
DISPLAY
▶ DIAGNOSTIC
SERVICE
INFO
    
```

Select the parameters by moving the cursor with SCROLL and confirm with ENTER

```

▶ ALARM CONFIGURATION
MEASURE STATUS
FROZEN GAIN
MAX GAIN TH.
PEAK VALUES
OUTPUT SIMUL.
    
```

#### 9.6.1 - ALARM CONFIGURATION

Position the cursor on ALARM CONFIGURATION, press ENTER to access

To enable or disable each diagnostic alarms.

```

▶ ALARM CONFIGURATION
MEASURE STATUS
FROZEN GAIN
MAX GAIN TH.
PEAK VALUES
OUTPUT SIMUL.
    
```

- with UP ARROW or SCROLL chose the desired item and press ENTER

```

▶ TEMPERATURE
NO ECHO FOUND
MAX GAIN
ECHO IN BLIND
DISTANCE >120%
    
```

- with UP ARROW or SCROLL enable or disable the alarm signal and press ENTER to confirm

```

DISABLE
▶ ENABLE
    
```

**9.6.2 - MEASURE STATUS**

Position the cursor on MEASURE STATUS, press ENTER to access.

It's possible to display the gain of the system, with values from 0 to 255.  
LEFT ARROW to exit

```
ALARM CONFIGURATION
▶ MEASURE STATUS
  FROZEN GAIN
  MAX GAIN TH.
  PEAK VALUES
  OUTPUT SIMUL.
```

```
MEASURE STATUS

G: 00000
```

**9.6.3 - FROZEN GAIN**

Position the cursor on MEASURE STATUS, press ENTER to access.

It's possible to fix a value of gain (from 1 to 255) and consequently disable the automatic gain control. Once the value is 000 the automatic gain control restarts.

Use UP ARROW and SCROLL to modify the value.

Press ENTER to confirm.

LEFT ARROW to exit without changes

Default value: 000

```
ALARM CONFIGURATION
MEASURE STATUS
▶ FROZEN GAIN
  MAX GAIN TH.
  PEAK VALUES
  OUTPUT SIMUL.
```

```
FROZEN GAIN

000
```

**9.6.4 - MAX GAIN TH**

Position the cursor on MAX GAIN TH, press ENTER to access.

It's possible to change the max value of gain. If the gain reaches this value, the "GAIN" error code is activated

Use UP ARROW and SCROLL to modify the value.

Press ENTER to confirm.

LEFT ARROW to exit without changes

Default value: 255

```
ALARM CONFIGURATION
MEASURE STATUS
  FROZEN GAIN
▶ MAX GAIN TH.
  PEAK VALUES
  OUTPUT SIMUL.
```

```
MAX GAIN TH

255
```

**9.6.5 - PEAK VALUES**

Position the cursor on PEAK VALUES, press ENTER to access.

The system store the maximum distance and the minimum distance measured since the power is turned ON.

It's possible to see those values or reset the values.

With the SCROLL button you can select the function.

Press ENTER to confirm.

```
ALARM CONFIGURATION
MEASURE STATUS
  FROZEN GAIN
  MAX GAIN TH.
▶ PEAK VALUES
  OUTPUT SIMUL.
```


```
▶ DISPLAY VALUES

  RESET VALUES
```

**9.6.5.1 - DISPLAY VALUES**

Position the cursor on DISPLAY VALUES, press ENTER to access.

Displays the max. and min. distance measured from power on.  
 LEFT ARROW to exit.  
 NB - The peak values stored are erased every time the  
 PTU50-51-56 turns-off

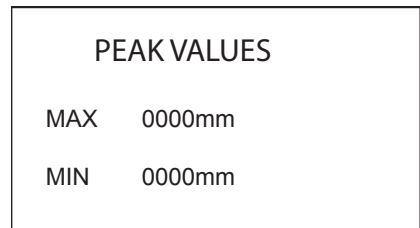

**9.6.5.2 - RESET VALUES**

Position the cursor on RESET VALUES, press ENTER to access.

LEFT ARROW to return to the previous menu





**9.6.6 - OUTPUT SIMULATION**


WARNING - entering in the SIMULATION function, the current output is not  
 in function of the level measurement. To restore the current as a measured  
 level function, press the LEFT ARROW button 3 times (RUN mode)

Position the cursor on OUTPUT SIMULATION, press ENTER to access.

It's possible to force the analog output to a desired value, from 3,5 to  
 21mA.  
 Use UP ARROW and SCROLL to modify the value.  
 LEFT ARROW to return to the previous menu.

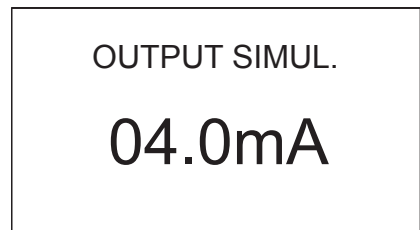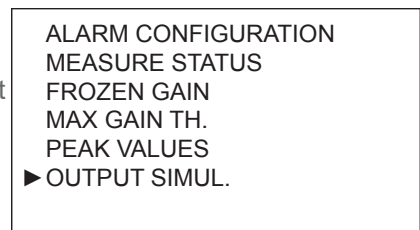

### 9.7 "SERVICE" menu

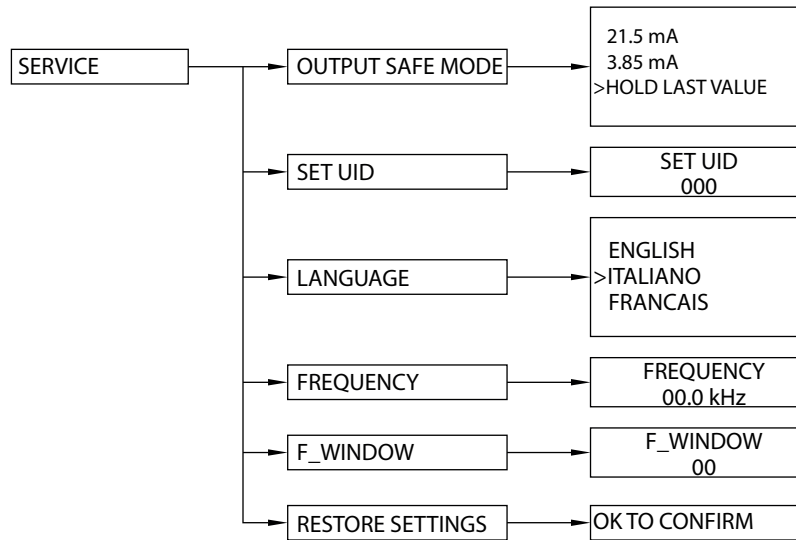

### 9.8 - SERVICE

From "RUN" mode, holding down UP ARROW, press ENTER to access  
Position the cursor on SERVICE and press ENTER

```

    SETUP
    DISPLAY
    DIAGNOSTIC
    ► SERVICE
    INFO
  
```

Select the parameters by moving the cursor with SCROLL and confirm with ENTER

```

    ► OUTPUT SAFE MODE
    SET UID
    LANGUAGE
    FREQUENCY
    F_WINDOW
    RESTORE SETTING
  
```

#### 9.8.1 - OUTPUT SAFE MODE

Position the cursor on OUTPUT SAFE MODE, press ENTER to access.

It's possible to choose a analog output value during diagnostic errors.  
 "21.5 mA" forces the current output to 21,5mA  
 "3.85 mA" forces the current output to 3,85mA  
 "HOLD LAST VALUE" maintains the output at the last valid value.  
 With the SCROLL button you can select the operation mode.  
 Press ENTER to confirm.  
 LEFT ARROW to exit without changes

Default value: HOLD LAST VALUE

```

    ► OUTPUT SAFE MODE
    SET UID
    LANGUAGE
    FREQUENCY
    F_WINDOW
    RESTORE SETTING
  
```

```

    ► 21.5 mA
    3.85 mA
    HOLD LAST VALUE
  
```

#### 9.8.2 - SET UID

Position the cursor on SET UID, press ENTER to access.

Can assign the address UID in this parameter, for a MUDBUS RTU network.

Use UP ARROW and SCROLL to modify the value.  
 Press ENTER to confirm.  
 LEFT ARROW to exit without changes

Default value 001

```

    OUTPUT SAFE MODE
    ► SET UID
    LANGUAGE
    FREQUENCY
    F_WINDOW
    RESTORE SETTING
  
```

```

    SET UID
    001
  
```

### 9.8.3 - LANGUAGE



Position the cursor on LANGUAGE, press ENTER to access.

Sets the menu language: English, Italian, French

Press SCROLL to select the menu language.

Press ENTER to confirm.

LEFT ARROW to exit without changes

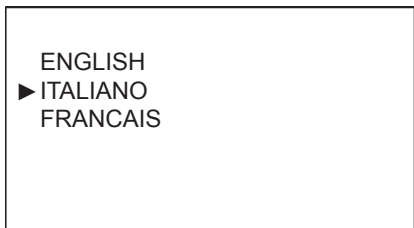
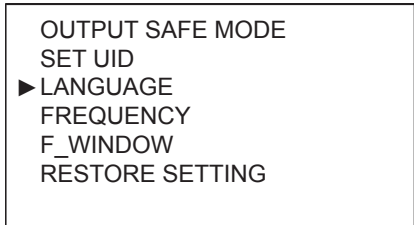


### 9.8.4 - FREQUENCY

Position the cursor on FREQUENCY, press ENTER to access.

It's possible to check the computed sensor emission frequency.

LEFT ARROW to exit

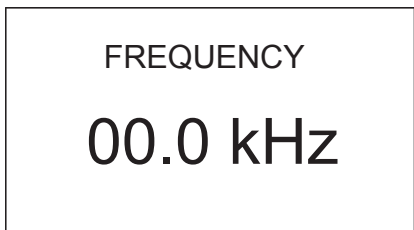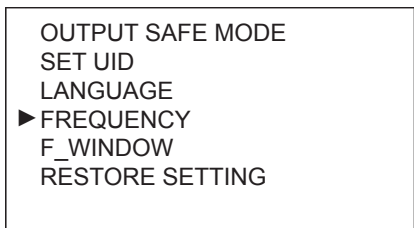

### 9.8.5 - F\_WINDOW

Position the cursor on F\_WINDOW, press ENTER to access.

It is the increase value (in cm), step to step, of the window width during the echo signal research phase.

The "F\_WINDOWS" is the area where the echo reception is active.

Normally it is positioned around the real echo signal and all echoes detected within the F\_WINDOW are deemed valid.

Example: F\_WINDOW parameter set to 5.

- The METER detects an echo signal which is 4 meters from the sensor.

- Suddenly, the echo signal disappears and a new echo signal to 3.5 mt away from the sensor is detected.

- Each time the echo signal will be emitted, the METER will enlarge "F\_WINDOW" with 5cm step, until covering the new eco detected area.

Now the F\_WINDOW will start to tighten around the new echo signal and the new measurement of 3,5mt distance will be used to calculate the level measurement, alarm thresholds, etc..

F\_WINDOW serves to filter false echo signals products, for example, by the agitator blades


Range: 05÷20

Use UP ARROW and SCROLL to modify the value.

Press ENTER to confirm.

LEFT ARROW to exit without changes

Default value: 05

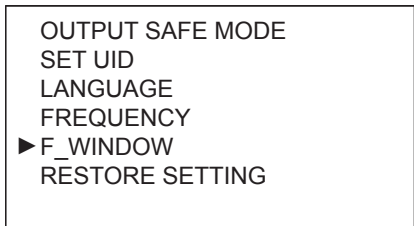

**9.8.6 - RESTORE SETTING**

Position the cursor on SET UID, press ENTER to access.

```


OUTPUT SAFE MODE
SET UID
LANGUAGE
FREQUENCY
F_WINDOW
▶ RESTORE SETTING
    
```

Press ENTER to restore the PTU50-51-56 default settings  
 LEFT ARROW to exit without restored the PTU50-51-56 default settings

```

OK TO CONFIRM
    
```

**9.9 "INFO" menu**

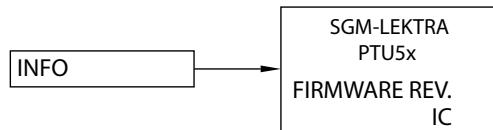

**9.10 - INFO**

Position the cursor on INFO, press ENTER to access.

```

SETUP
DISPLAY
DIAGNOSTIC
SERVICE
▶ INFO
    
```

In addition to information about the manufacturer, are displayed the  
 firmware revision and the configuration index

```

SGM-LEKTRA
PTU5x

FIRMWARE      REV.
                I.C.
    
```

# 10-FACTORY TEST AND QUALITY CERTIFICATE

---



In conformity to the company and check procedures I certify that the equipment:

(Ultrasonic sensor)

is conform to the technical requirements on Technical Data and it is made in conformity to the procedure

Quality Control Manager: ..... Production and check date: .....